



## HOW TO USE THE EGG COOKER

Every time you cook an egg follow these instructions from the beginning to the end – don't ever try to cook an egg using the water left behind in the cooker – you will burn it out!

1. Remove the transparent plastic lid & the egg holder – put them down somewhere safe
2. Check whether there is water in the base of the egg-cooker – if there is, remove it by pouring it into the metal jug provided (you must do this)
3. Take the little plastic measuring tube – fill it up to the top line with water from the glass jug
4. Pour the water into the base of the egg cooker
5. Put the egg-holder back into the cooker
6. Take each egg one at a time. Holding the fat-end down, push it onto the egg-piercer with a rapid down-movement (there is a pin in the egg piercer that makes a little hole in the egg – this stops it cracking during cooking)
7. Turn the egg so that the hole is facing up & put the egg into the egg holder
8. Put the plastic transparent lid back on the cooker
9. Turn the cooker on
10. An alarm will sound when the eggs are cooked (this takes some time so be patient – don't take the eggs out before the alarm has sounded)
11. **TURN-OFF THE COOKER & remove the eggs.**
12. Put the transparent plastic lid back on the cooker

**Buon Appetito!!!**

## HOW TO USE THE COFFEE MACHINE

1. Check that the heating elements are turned on – a red dot means the machine is on & heating – a green dot means off
2. Turn on the heating elements (if necessary) by pressing in the 'On/Off' buttons
3. Take a coffee pad out of the Illy box – make sure the 'Illy' embossed on the pad is facing up
4. Raise any one of the levers with the black handle – insert the pad with the 'Illy' facing up into the pad-holder – make sure it is sitting comfortably
5. Let the lever down to sit on the pad. Now press the lever down until it stops & locks into place (note: if the lever isn't locked down the coffee will squirt out the sides)
6. Press-in the button with the coffee-cup symbol to start the coffee flowing. It is not automatic. To stop the coffee you must again press-in the button with the coffee-cup symbol
7. To make a capuccino the steam tank must be under pressure – this takes around 15 minutes & the needle on the gauge at the front of the machine should be at '12 o'clock'